



REFER TO PELICAN Z8
INSTALLATION GUIDES FOR
CONTROL TERMINAL WIRING
AND SEQUENCE GUIDE

REFER TO PELICAN Z8
INSTALLATION GUIDE FOR
WIRELESS ANTENNA
PLACEMENT AND WIRING

ONLY A SINGLE Z8 IS
CONNECTED TO VARIABLE
SPEED FAN. THE TWO Z8s
CAN BE SET TO
COMMUNICATE STATIC
REQUIREMENT WIRELESSLY

<p>Dual Duct - AC, Boiler Heat, Variable Speed Fan, and Economizer</p>	<p>DRAWN BY </p>	<p>CHECKED</p>	<p>DATE 02/18/2016</p>	<p>SCALE NTA</p>	<p>SHEET NO. 1 of 1</p>
---	---	----------------	-----------------------------------	-----------------------------	------------------------------------