

REFER TO PELICAN Z8
INSTALLATION GUIDES FOR
CONTROL TERMINAL WIRING
AND SEQUENCE GUIDE

REFER TO PELICAN Z8
INSTALLATION GUIDE FOR
WIRELESS ANTENNA
PLACEMENT AND WIRING

ONLY A SINGLE Z8 IS
CONNECTED TO VARIABLE
SPEED FAN. THE TWO Z8s
CAN BE SET TO
COMMUNICATE STATIC
REQUIREMENT WIRELESSLY

