



1 POWER SUPPLY PROVIDE DISCONNECT MEANS AND OVERLOAD PROTECTION AS REQUIRED.

2 POWER SUPPLY 24VAC.

3 ENSURE THAT EQUIPMENT TRANSFORMER IS SIZED TO HANDLE THE EXTRA LOAD OF THE ACTUATOR.

PEARL Economizer Controller

SCALE: NTS

