



REFER TO PELICAN Z24 INSTALLATION GUIDES FOR CONTROL TERMINAL WIRING AND SEQUENCE GUIDE

REFER TO PELICAN Z24 INSTALLATION GUIDE FOR WIRELESS ANTENNA PLACEMENT AND WIRING

<p><b>AHU w/ AC Only, Variable Speed Fan, and Economizer Boiler for Zone Reheat</b></p>	<p>DRAWN BY </p>	<p>CHECKED</p>	<p>DATE <b>02/18/2016</b></p>	<p>SCALE <b>NTA</b></p>	<p>SHEET NO. <b>1 of 1</b></p>
---	---	----------------	-----------------------------------	-----------------------------	------------------------------------